

Installation

To enable the most convenient installation of your new CS9013 restraint, the following alternative method of installation is provided. This method will ensure that you can remove all covers for washing without having to uninstall the restraint. When preparing for installation follow the following steps:

- Step 1:** Unclip the press studs on the side of the seat base (refer Figure 1).
- Step 2:** Fold the armrest covers forward to expose the plastic armrests (refer Figure 2).
- Step 3:** Rotate the vehicle seat belt through the armrest, passing it across the shell and then pass it out through the other side of the seat (refer Figure 3).
- Step 4:** If the vehicle seat belt is long enough, it could be passed under the tab in the centre of the seat (refer to Instruction Manual)
- Step 5:** Connect the seat belt by inserting the tongue into the buckle.
- Step 6:** Remove all slack from the seat belt;
- First feed all lap belt slack through to the buckle.
 - Then feed all slack back through the sash belt (towards the seatbelts anchorage point in the vehicle).
- Step 7:** Fold the armrest cover back over the armrest and secure the front press stud (the rear press stud can remain unclipped) (refer Figure 4).

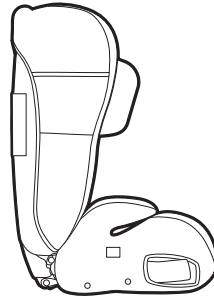


Figure 1

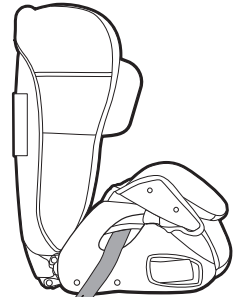


Figure 2

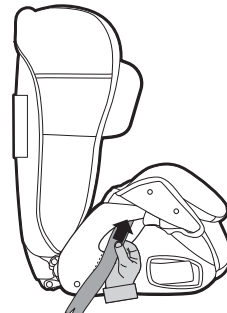


Figure 3

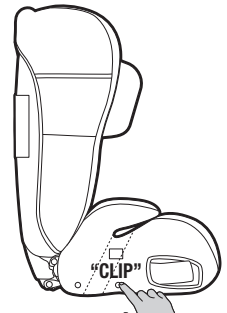


Figure 4

Tether Storage

After correctly installing the restraint in your car, roll up and replace any excess strap in the storage pocket provided.

